


INSTRUCTIONS

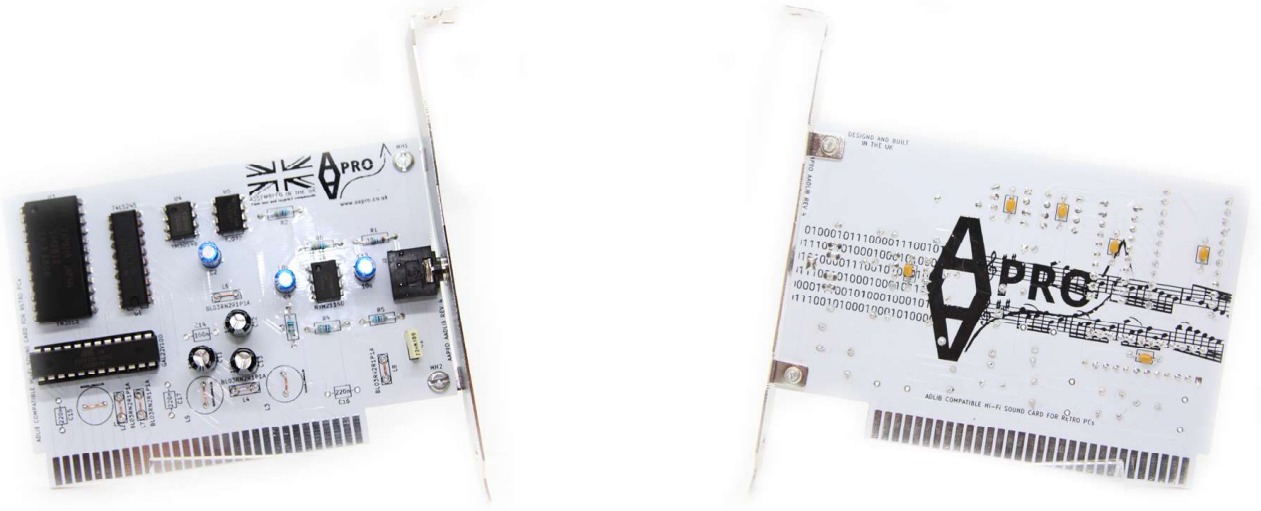

TOOLS NEEDED



STEPS

RECOMMENDED ORDER OF ASSEMBLY:

1. INSTALL DECOUPLING CAPACITORS (C3, C4, C5, C6, C7, C8) ON THE REAR SIDE OF THE CARD.
2. INSTALL 10 OHM RESISTOR R1 AND 10KOHM RESISTORS R2, R3, R4, R5, R6
3. INSTALL 24 PIN IC SOCKET
4. INSTALL JUMPER WIRE AT LOCATIONS L1 THROUGH L8
5. INSTALL AUDIO JACK
6. INSTALL 10UF CAPACITORS C2, C9, C10
7. INSTALL 22NF CAPACITOR C1
8. INSTALL 100UF CAPACITORS C11, C12, C13
9. SOLDER IN REMAINING ICS (U1, U3, U4, U5, U6)
10. INSTALL U2 IC IN SOCKET
11. PLEASE LEAVE C15, C16, C17 UNPOPULATED, THESE ARE USED IN PRO VERSION.
12. ATTACH BRACKET

THANK YOU FOR YOUR PURCHASE!
AAPRO LTD TEAM