

INSTRUCTIONS




TOOLS NEEDED



STEPS

RECOMMENDED ORDER OF ASSEMBLY:

1. INSTALL DECOUPLING CAPACITORS (C1 -C11) ON THE REAR SIDE OF THE CARD
2. INSTALL 10KOHM RESISTORS R3, R4 ON THE REAR SIDE OF THE CARD
3. INSTALL 470OHM RESISTORS R1,R2
4. OPTIONAL: INSTALL IC SOCKETS
5. INSTALL DIP SWITCHES
6. INSTALL BUSSED RESISTOR PACKS (RP1, RP2)
7. INSTALL 47UF CAPACITOR C12
8. INSTALL 2 SETS OF 2PIN HEADERS FOR LED AND DOM POWER
9. INSTALL LED D1
10. INSTALL IDE CONNECTOR IDE1
11. ATTACH BRACKET
12. INSTALL ICs IN SOCKETS.
13. SET ROM_ADDR AND IF_ADDR TO THEIR DEFAULT POSITION

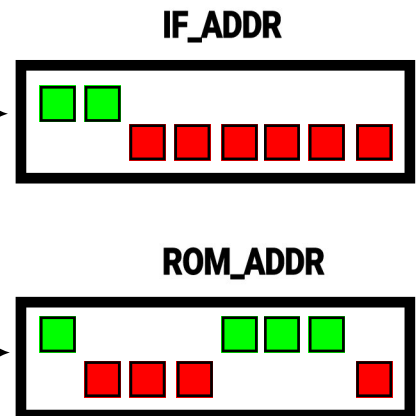

Download
source files here

THANK YOU FOR YOUR PURCHASE!
AAPRO LTD TEAM